


Nail capping and backing together using 50mm nails creating an L shape and slot on the top and fix every 4th board through to the backing

All fence bays should be 3.0m between post centres until the last bay of fencing. Cut rails and gravel boards to complete last bay

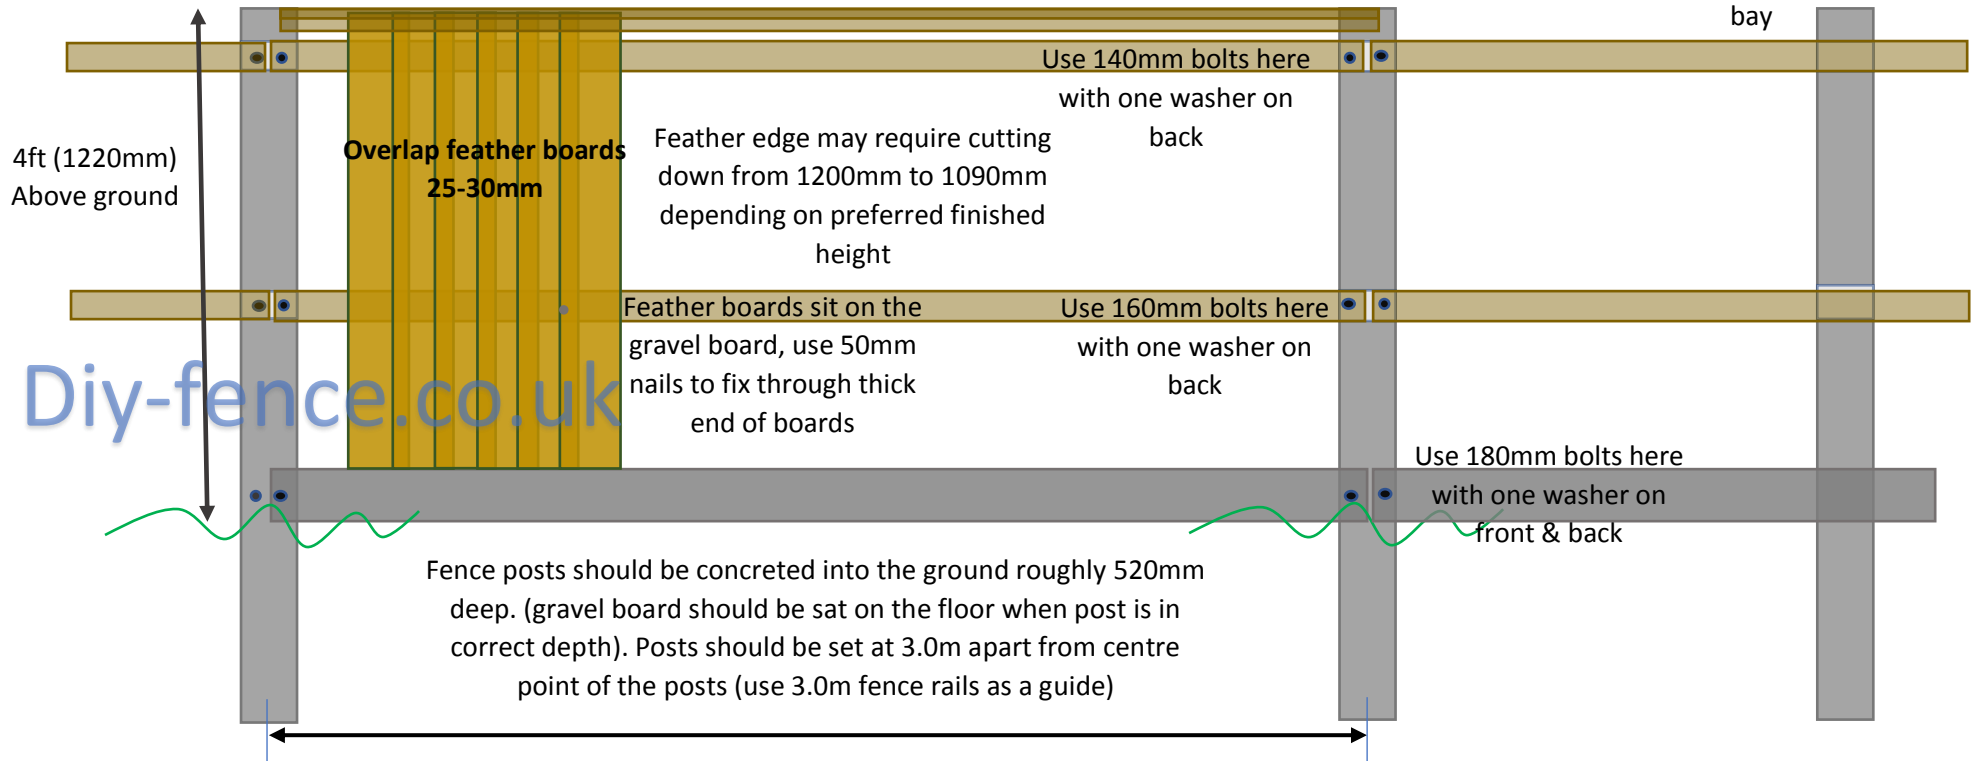

Basic Steps

1. Concrete posts 3.0m between centre of posts (end posts can be installed first and then stringed to identify a straight fence line).
2. Gravel boards can be bolted onto face of posts, then drill and bolt rails to the face of the posts.
3. Ready to pale. Sit feather boards on the gravel board, overlap each board by 25-30mm and nail through thick edge of feather boards.
4. Capping and backing can now be assembled with 50mm nails and slotted between posts and feather edge